

NOTE: The lower o-ring can be torn which can result in severe engine damage if the following procedure is not followed.

Lightly lubricate both the upper and lower o-ring with clean engine oil prior to installation.

Install the injector into the fuel rail by hand using a twisting motion. Make sure the injector is fully seated and properly positioned PRIOR to installing the injector hold-down bracket.





REMANUFACTURING, INC.™

BOLETÍN TÉCNICO: BT 120

Instalación Del Inyector De Alimentación Lateral

NOTA: El anillo inferior se puede desgarrar y causar severos daños al motor si no se siguen los siguientes procedimientos

Lubricar ligeramente el anillo superior e inferior con aceite de motor limpio antes de la instalación.

Instale el inyector de combustible en el riel a mano, utilizando un movimiento giratorio. Asegúrese de que el inyector está plenamente asentado y correctamente posicionado antes de instalar el inyector mantenga abajo el soporte.



See Reverse Side for English

TB-0120A-ES